

KA-4040R
SERVICE MANUAL

KENWOOD

KENW-03205

©1991-6 PRINTED IN JAPAN B51-4413-00(S)2007

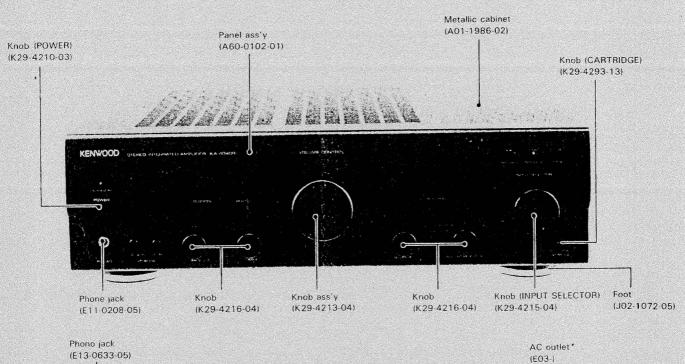

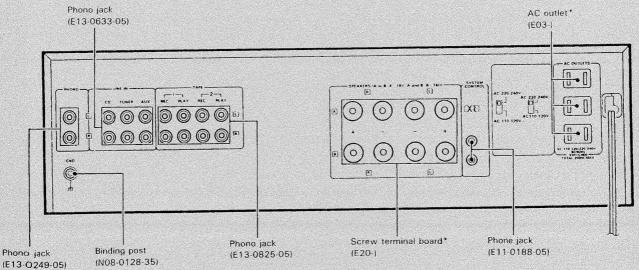


CONTENTS

| REMOTE CONTROL OPERATION 3 | 3 | SCHEMATIC DIAGRAM | 17 |
|-------------------------------|---|-------------------|----|
| CIRCUIT DESCRIPTION | 1 | EXPLODED VIEW | 21 |
| ADJUSTMENT/REGLAGE/ABGLEICH10 |) | PARTS LIST | 23 |
| WIRING DIAGRAM 11 | | SPECIFICATIONS | 27 |
| PC BOARD 13 | 3 | | |

KA-4040R

REMOTE CONTROL OPERATION

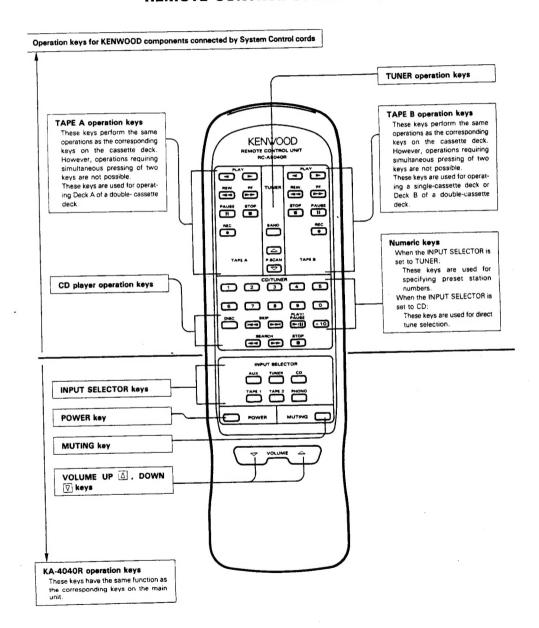

CIRCUIT DESCRIPTION

MICROPROCESSOR (µPD75104G-778)

1. TEST MODE

1.1 Test Mode Using Mainframe Keys

(1) Setting

Plug in while pressing the SOURCE DIRECT key.

(2) Contents

- Switch the power on so that all LED indicators go on. Operate all TACT keys and the rotary encoder to cancel all the LED indicators that go on. In the all-light mode, all the INPUT SELECTOR LED indicators do not go on at the same time. The next SELECTOR LED indicator goes on approximately 100 ms after one SELECTOR LED indicator goes on in the same order as during input selector selection using the rotary encoder, because the output current exceeds the absolute maximum rating when all the INPUT SELECTOR LED indicators go on, since each LED indicator is directly driven by a microcomputer.
- When the LOUDNESS key is pressed while the test mode is set with a mainframe key , The electromotive VOLUME decreases. When the MUTING key is pressed, the VOLUME increases. The VOLUME stops when the SOURCE DIRECT key is pressed.


(3) Cancellation

 Plug off. If there a backup function is to be used, plug off and destroy the backup check data when a test mode flag is set during backup operation.

2. INITIALIZING

Insert the AC plug into a wall outlet while pressing the POWER key.


CIRCUIT DESCRIPTION

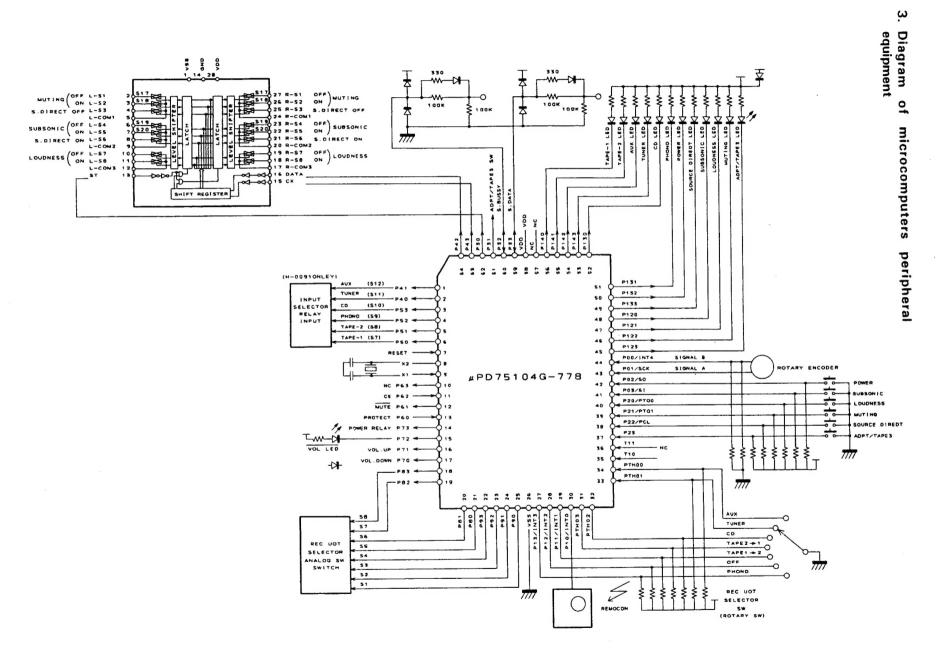

CIRCUIT DESCRIPTION

KA-4040R

4. PIN CONNECTIONS

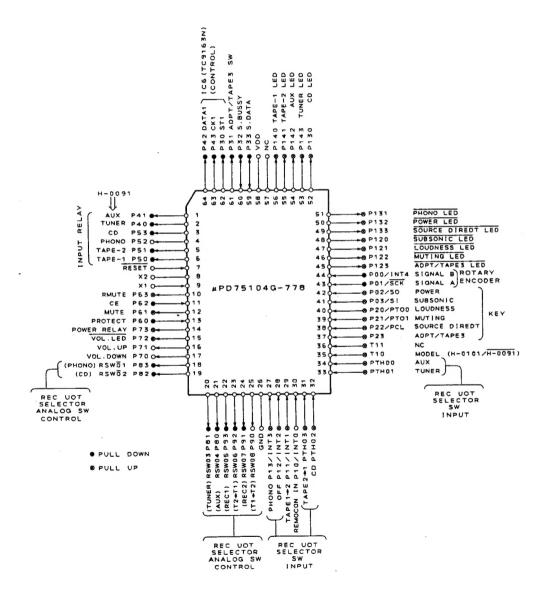


CIRCUIT DESCRIPTION

| Pin No. | Pin name | I/O | Name | Description |
|---------|----------|-----|----------------|--|
| 1 | P41 | 0 | SRAUX | AUX SELECTOR RELAY control pin (high when active). Outputs a low signal in the backup mode. |
| 2 | P40 | 0 | SRTUNER | TUNER SELECTOR RELAY control pin (high when active). Outputs a low signal in the backup mode. |
| 3 | P53 | 0 | SRCD | CD SELECTOR RELAY control pin (high when active). Outputs a low signal in the backup mode. |
| 4 | P52 | 0 | SRPHONO | PHONO SELECTOR RELAY control pin (high when active). Outputs a low signal in the backup mode. |
| 5 | P51 | 0 | SRTAPE2 | TAPE2 SELECTOR RELAY control pin (high when active). Outputs a low signal in the backup mode. |
| 6 | P50 | 0 | SRTAPE1 | TAPE1 SELECTOR RELAY control pin (high when active). Outputs a low signal in the backup mode. |
| 7 | /RESET | I | | Microcomputer reset input pin. |
| 8 | X2 | 0 | | Ceramic connection pin for microcomputer system |
| 9 | X1 | 1 | | clock oscillation (4.19 MHz). |
| 10 | P63 | 0 | RMUTE | Unused. Enters the input mode during backup. |
| 11 | P62 | 1 | /CE | Backup state detection pin (low when active). Enters the input mode during backup. |
| 12 | P61 | 0 | MUTE | Mute signal output pin (high when active). Enters the input mode during backup. |
| 13 | P60 | 1 | PROTECT | Protect state detection pin (high when active). The POWER LED indicator blinks when a high signal is input to this pin during the power-on sequence. Enters the input mode during backup. |
| 14 | P73 | 0 | POWER RELAY | POWER RELAY control pin. POWER ON: High POWER OFF: Low Enters the input mode during backup. |
| 15 | P72 | 0 | VOL. LED | Volume index LED control pin. Goes ON: Low Goes OFF: High Enters the input mode during backup. |
| 16 | P71 | 0 | VOL. UP | Electromotive volume control Up signal output pin. Volume control Up: High Except volume control Up: Low Enters the input mode during backup. |
| 17 | P70 | 0 | VOL. DOWN | Electromotive volume control Down signal output pin Volume control Down: High Except volume control Down: Low |
| 18~25 | P83~P90 | 0 | RSW08~RSW01 | Control signal output pin of REC OUT SELECTOR analog switch (high when active). Outputs a signal according to the REC Out selector state as shown or the attached sheet, Outputs a low signal in the back up mode. |
| 26 | Vss | | GND | Microcomputer GND pin. |
| 27 | P13/INT3 | 1 | RSWI (PHONO) | REC out selector state setting input pin (PHONO). (Low when active.) |
| 28 | P12/INT2 | 1 | RSWI (OFF) | REC out selector state setting input pin (OFF). (Low when active.) |
| 29 | P11/INT1 | 1 | RSWI (TAPE1→2) | REC out selector state setting input pin (TAPE1→TAPE2). (Low when active.) |

CIRCUIT DESCRIPTION

| Pin No. | Pin name | I/O | Name | Description |
|---------|-----------|-----|-----------------------|--|
| 30 | PIO/INITO | 1 | REMOCON IN | Remote control signal input pin. |
| 31 | РТН03 | ١ | RSWI (TAPE2→1) | REC out selector state setting input pin (TAPE2 → TAPE1). (Low when active.) |
| 32 | PTH02 | ı | RSWI (CD) | REC out selector state setting input pin (CD). (Low when active.) |
| 33 | PTHO1 | ŀ | RSWI (TUNER) | REC out selector state setting input pin (TUNER). (Low when active.) |
| 34 | РТНОО | 1 | RSWI (AUX) | REC out selector state setting input pin (AUX). (Low when active.) |
| 35 | TIO | 1 | | Unused. |
| 36 | TI1 | ı | | Unused. |
| 37 | P23 | 1 | KEYIN (ADPT/TAPE3) | ADPT/TAPE3 key input pin (low when active). Enters the input mode during backup. |
| 38 | P22/PCL | 1 | KEYIN (SOURCE DIRECT) | SOURCE DIRECT key input pin (low when active). Enters the input mode during backup. |
| 39 | P21/PTO1 | 1 | KEYIN (MUTING) | MUTING key input pin (low when active). Enters the input mode during backup. |
| 40 | P20/PT00 | 1 | KEYIN (LOUDNESS) | LOUDNESS key input pin (low when active). Enters the input mode during backup. |
| 41 | PO3/SI | 1 | KEYIN (SUBSONIC) | SUBSONIC key input pin (low when active). |
| 42 | PO2/SO | 1 | KEYIN (POWER) | POWER key input pin (low when active). Enters the input mode during backup. |
| 43 | PO1/SCK | ı | REI A | ROTARY ENCODER A signal input pin. Enters the in put mode during backup. |
| 44 | POO/INT4 | 1 | REI B | ROTARY ENCODER B signal input pin. |
| 45 | PI23 | 0 | ADPT/TAPE23 LED | ADPT/TAPE3 LED control pin (low when active). No pull-up resistor is incorporated by a mask option. Enters the input mode during backup. |
| 46 | P122 | 0 | MUTING LED | MUTING LED control pin (low when active). No pull up resistor is incorporated by a mask option. Enters the input mode during backup. |
| 47 | PI21 | 0 | LOUDNESS LED | LOUDNESS LED control pin (low when active). No pull-up resistor is incorporated by a mask option. Enters the input mode during backup. |
| 48 | P120 | 0 | SUBSONIC LED | SUBSONIC LED control pin (low when active). No pull-up resistor is incorporated by a mask option. Enters the input mode during backup. |
| 49 | P133 | 0 | SOURCE DIRECT LED | SOURCE DIRECT LED control pin (low when active No pull-up resistor is incorporated by a mask option Enters the input mode during backup. |
| 50 | PI32 | 0 | POWER LED | POWER LED control pin (low when active). No pull up resistor is incorporated by a mask option. Enter the input mode during backup. |
| 51 | PI31 | 0 | PHONO LED | PHONO LED control pin (low when active). No pull up resistor is incorporated by a mask option. Enter the input mode during backup. |
| 52 | P130 | 0 | CD LED | CD LED control pin (low when active). No pull-up resistor is incorporated by a mask option. Enters to input mode during backup. |

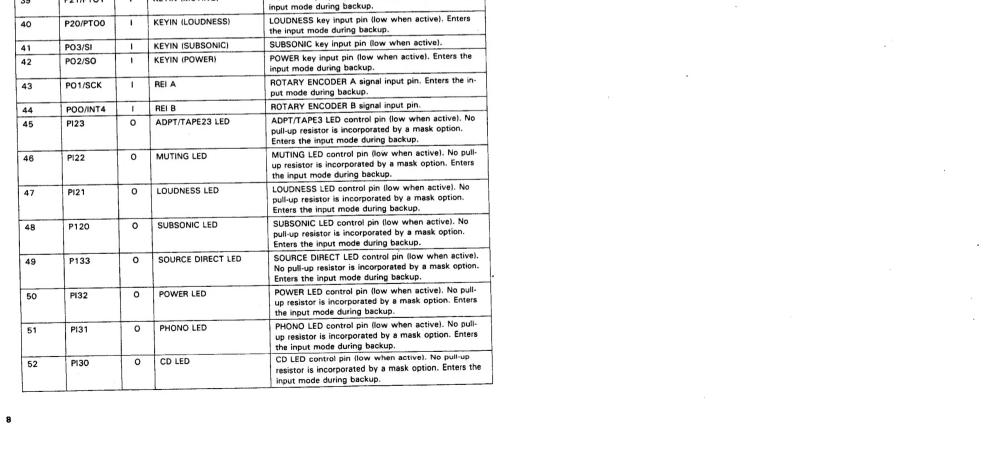

KA-4040R KA-4040R

CIRCUIT DESCRIPTION

| Pin No. | Pin name | 1/0 | Name | Description |
|---------|----------|-----|------------|--|
| 53 | PI43 | 0 | TUNER LED | TUNER LED control pin (low when active). No pull-up resistor is incorporated by a mask option. Enters the input mode during backup. |
| 54 | PI42 | 0 | AUX LED | AUX LED control pin (low when active). No pull-up resistor is incorporated by a mask option. Enters the input mode during backup. |
| 55 | PI41 | 0 | TAPE2 LED | TAPE1 LED control pin (low when active). No pull-up resistor is incorporated by a mask option. Enters the input mode during backup. |
| 56 | P140 | 0 | TAPE1 LED | TAPE1 LED control pin (low when active). No pull-up resistor is incorporated by a mask option. Enters the input mode during backup. |
| 57 | NC | | | |
| 58 | Vdd | | | Microcomputer power supply pin. |
| 59 | P33 | 1/0 | SDATA | Serial communication SDATA signal input/output pin. Enters the input mode during backup. |
| 60 | P32 | 1/0 | SBUSY | Serial communication SBUSY signal input/output pin. Enters the input mode during backup. |
| 61 | P31 | 0 | ADPT/TAPE3 | ADPT/TAPE3 analog switch control signal output pin. ADPT/TAPE3 ON: High ADPT/TAPE3 OFF: low Outputs a low signal in the backup mode. |
| 62 | P30 | 0 | ST1 | FUNCTION IC TC9163N ST signal output pin for MUTING, SUBSONIC, SOURCE DIRECT, and LOUD-NESS. Usually set low. Outputs a low signal in the backup mode. |
| 63 | P43 | 0 | CK1 | FUNKTION IC TC9163N CK signal output pin for MUTING, SUBSONIC, SOURCE DIRECT, and LOUD-NESS. Usually set low. Outputs a low signal in the backup mode. |
| 63 | P43 | 0 | DATA1 | FUCTION IC TC9163N DATA signal output pin for MUTING, SUBSONIC, SOURCE DIRECT, and LOUDNESS. Usually set low. Outputs a low signal in the backup mode. |

ADJUSTMENT/REGLAGE/ABGLEICH

ADJUSTMENT


| No. | ITEN | INPUT SETTINGS | OUTPUT SETTINGS | AMPLIFIER Setting | ALIGNMENT POINTS | ALIGN FOR | FIG. |
|-----|--------------|-----------------------------------|--|----------------------|------------------------------|----------------|------|
| | | e specified, set AKER: B RECOU | the respective s T: OFF SELECTOR | | 1: | | |
| 1 | IDLE CURRENT | - | Connect a DC voltmeter across CP1 (L) CP2 (R) (X09-) | VOLUME: 0 | VR1 (L) VR2 (R) (X09-) | 15 mV (34 mA). | (a) |

REGLAGES


| | | REGLAGE DE | REGLAGE DE | REGLAGE DE | POINTS DE | | |
|--|--------------|------------|-----------------|-----------------|-------------|----------------|------|
| N. | ITEM | L' ENTREE | LA SORTIE | L'AMPLIFICATEUR | L'ALIGNMENT | ALIGNER POUR | FIG. |
| Sauf indicationcontraire, régler comme suit les commandes respectives: | | | | | | | - 1 |
| POWER:ON SPEAKER: B REC OUT: OFF SELECTOR: PHONO | | | | | | | |
| | | | Connecter un | | | | |
| | | | voltmètre de CC | | VR1 (G) | | |
| 1 | COURANT DE | - | SUR CP1 (G) | VOLUME: 0 | VR2 (D) | 15 mV (34 mA). | (a) |
| | POLARISATION | | CP2 (D) | | (X09-) | | |
| | | | (X09-) | | | | |

ABGLEICH


| NR. | GENGENSTAND | EINGANGS- EINSTELLUNG | AUSANG- Einstellung | VORSTÄRKER- Einstellung | ABGLEICHE- PUNKTE | ABGLEICHEN FÜR | ABB. |
|-----|-----------------|--------------------------|---|----------------------------|------------------------------|----------------|------|
| | | | die einzelnen Scha DUT: OFF SELECTE | | stellen: | | |
| 1 | - LEERLAUFSTROM | - | Einen Gleichspannungs messer über CP1 (L) CP2 (R) anschließen. (X09-) | VOLUME: 0 | VR1 (L) VR2 (R) (X09-) | 15 mV (34 mA). | (a) |

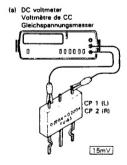

KA-4040R KA-4040R WIRING DIAGRAM

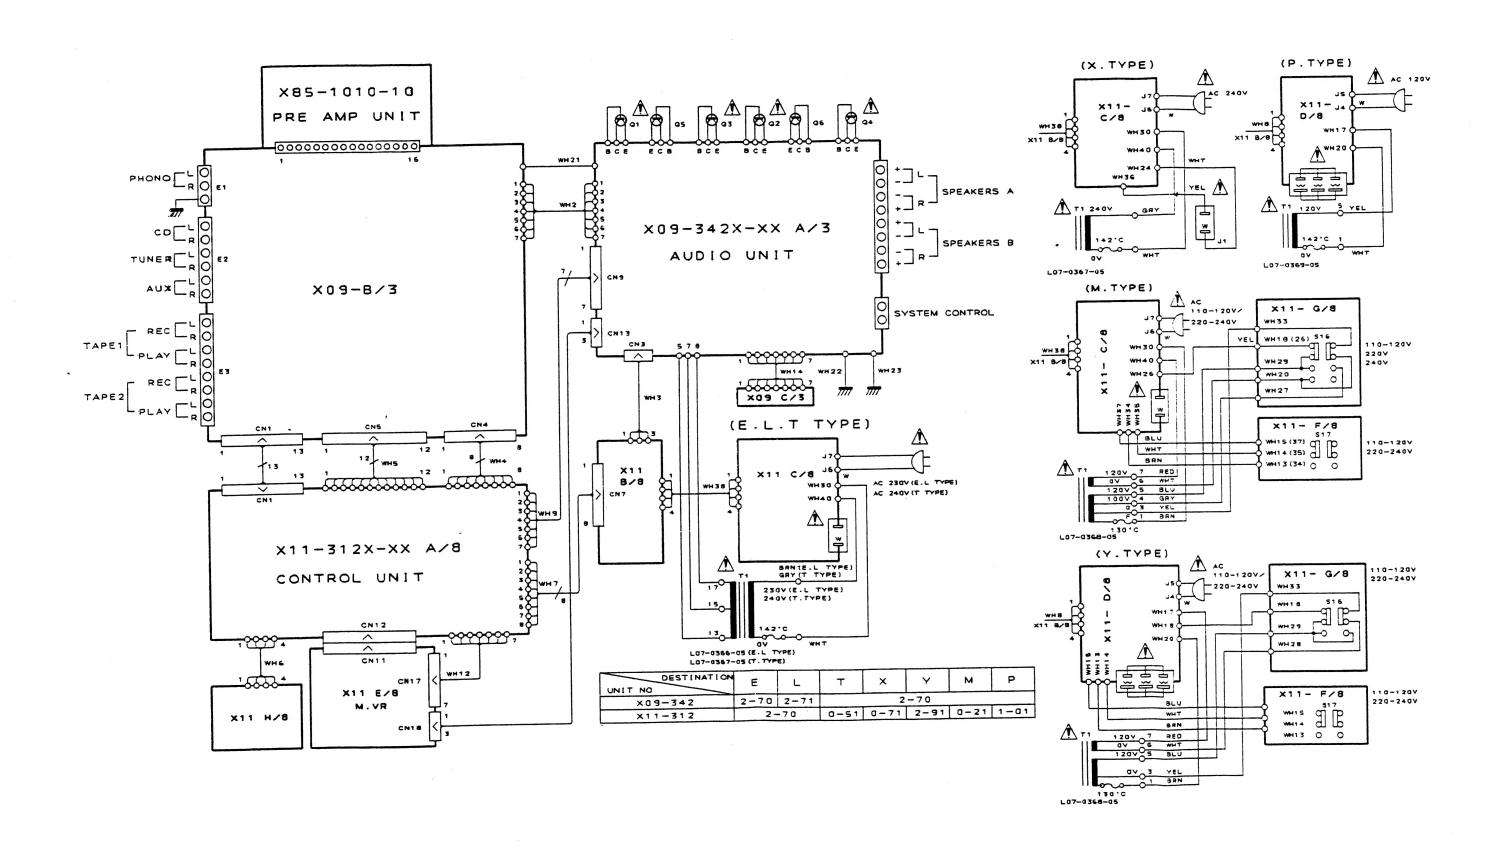



PC BOARD (Component side view)

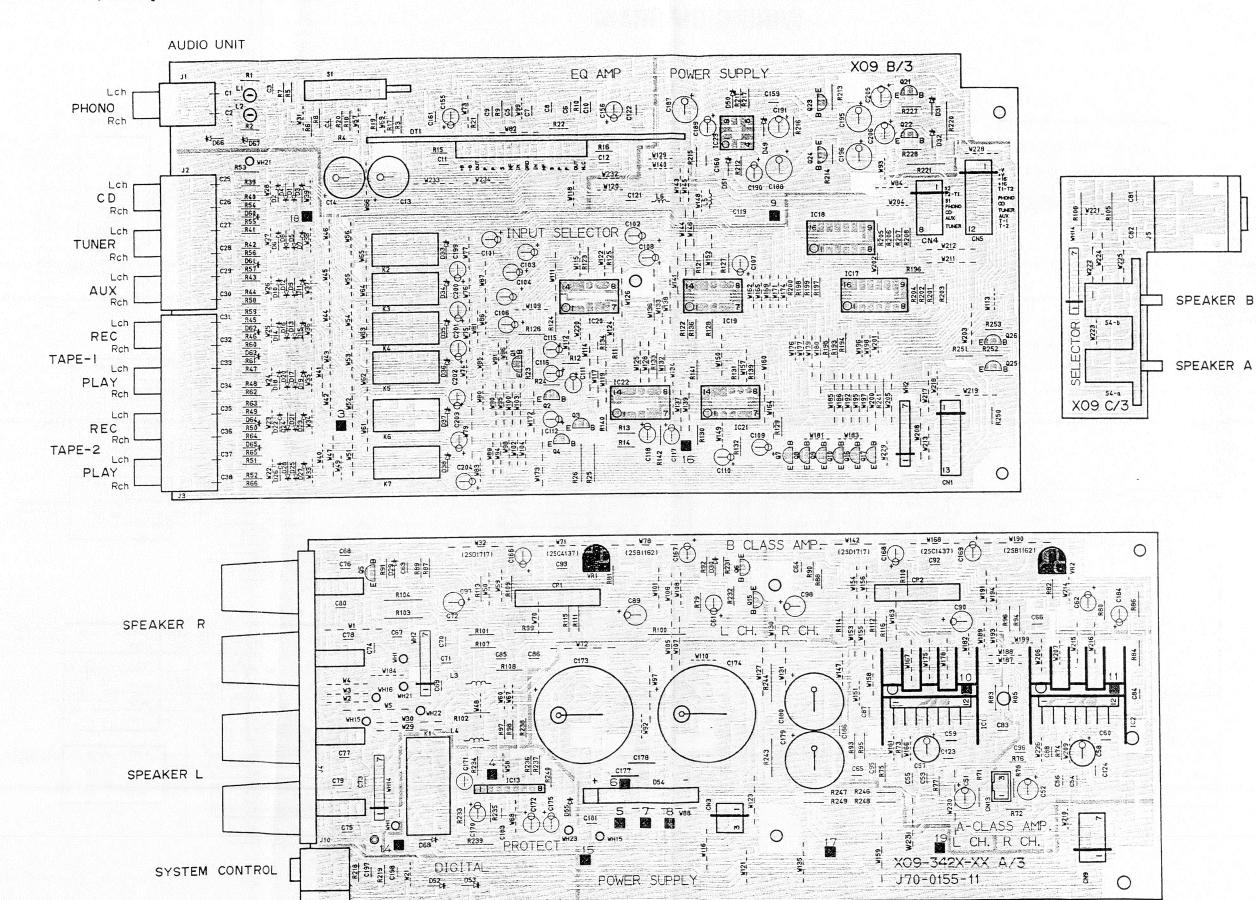



PHONES


PC BOARD (Component side view)

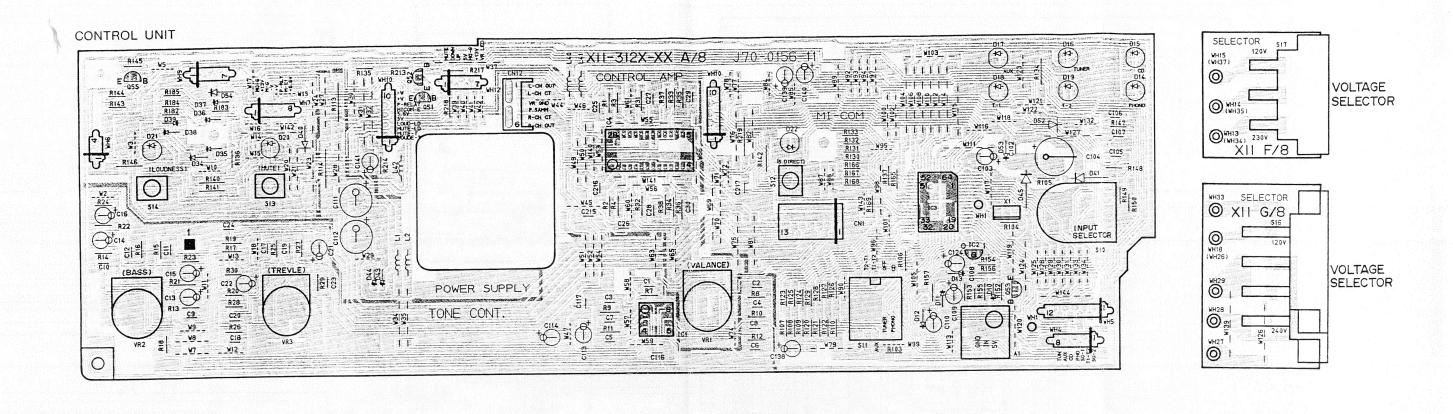

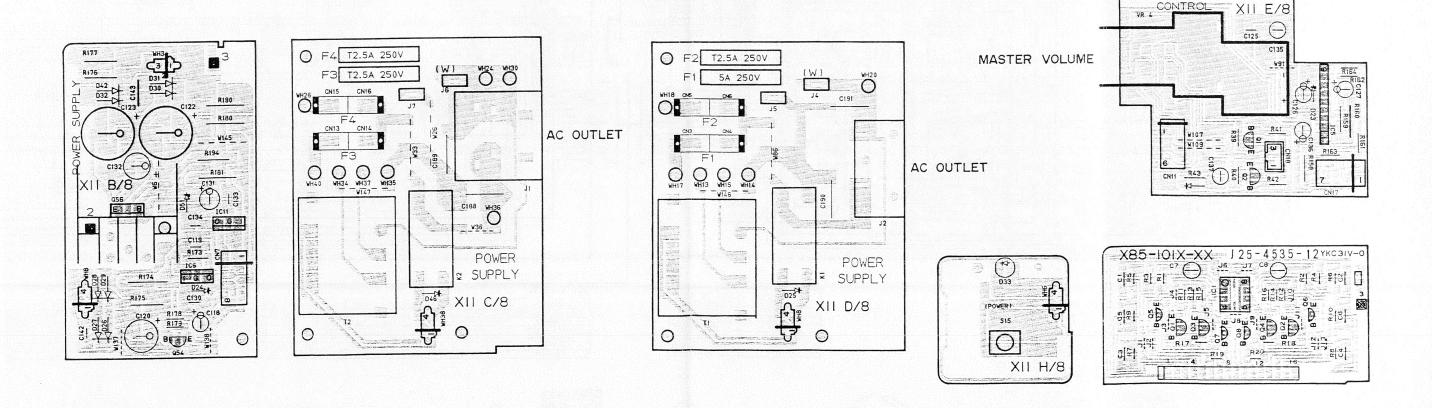

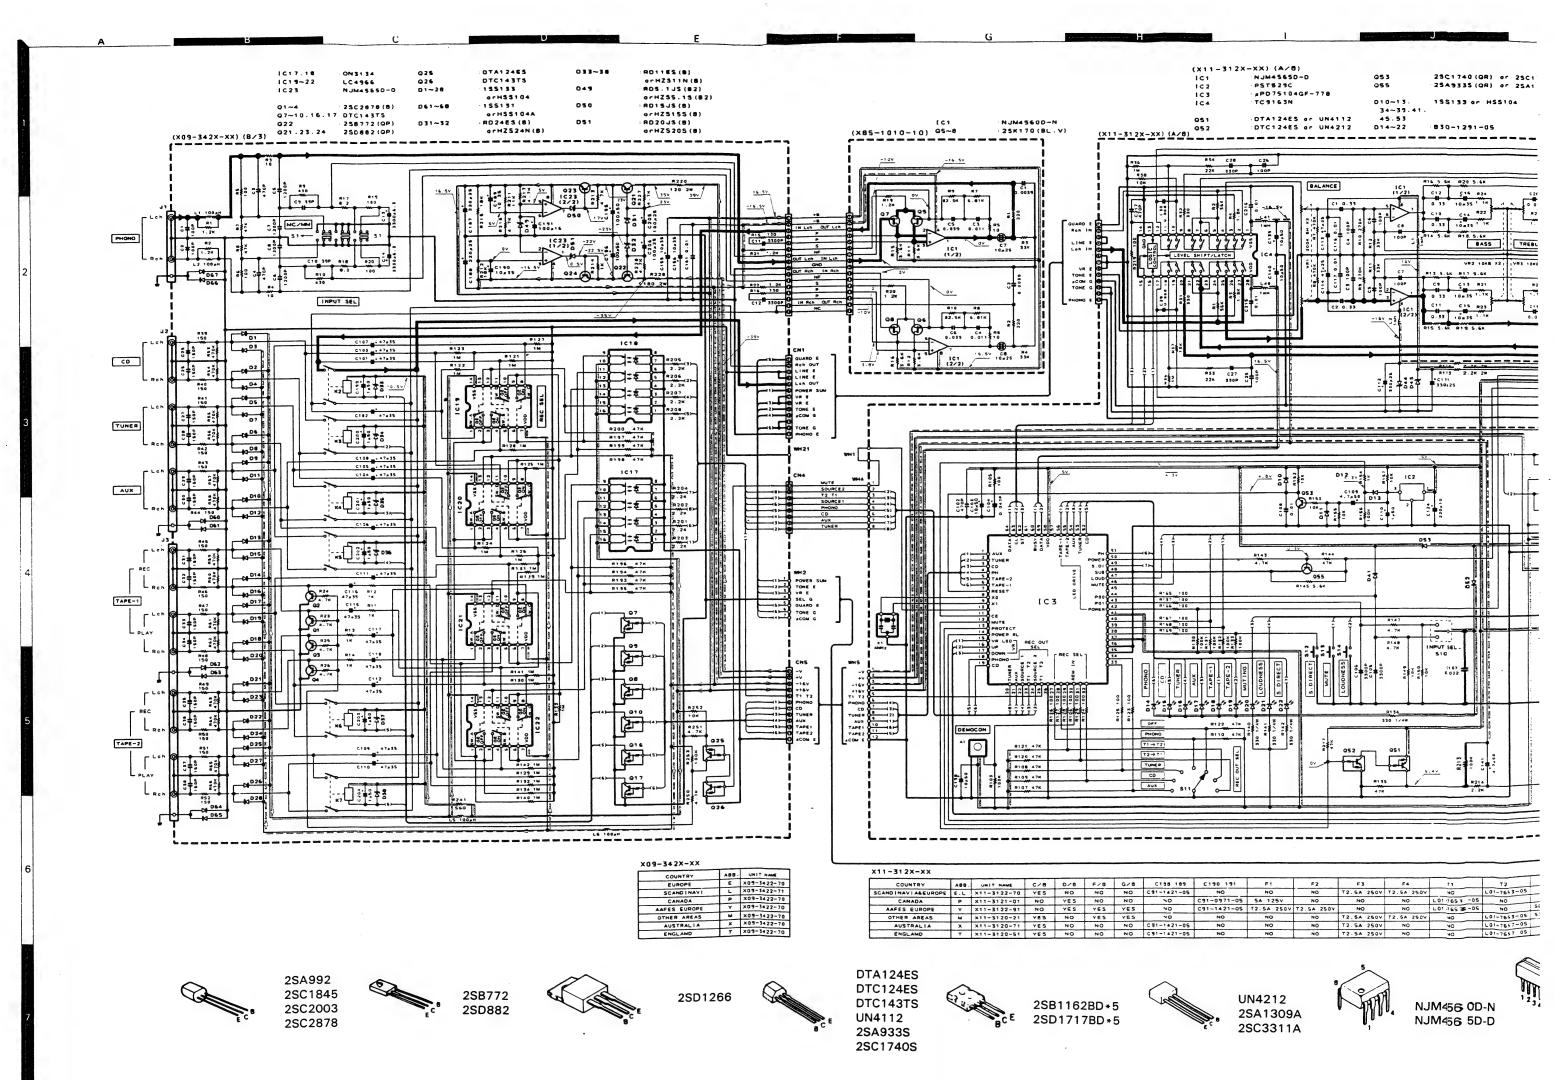

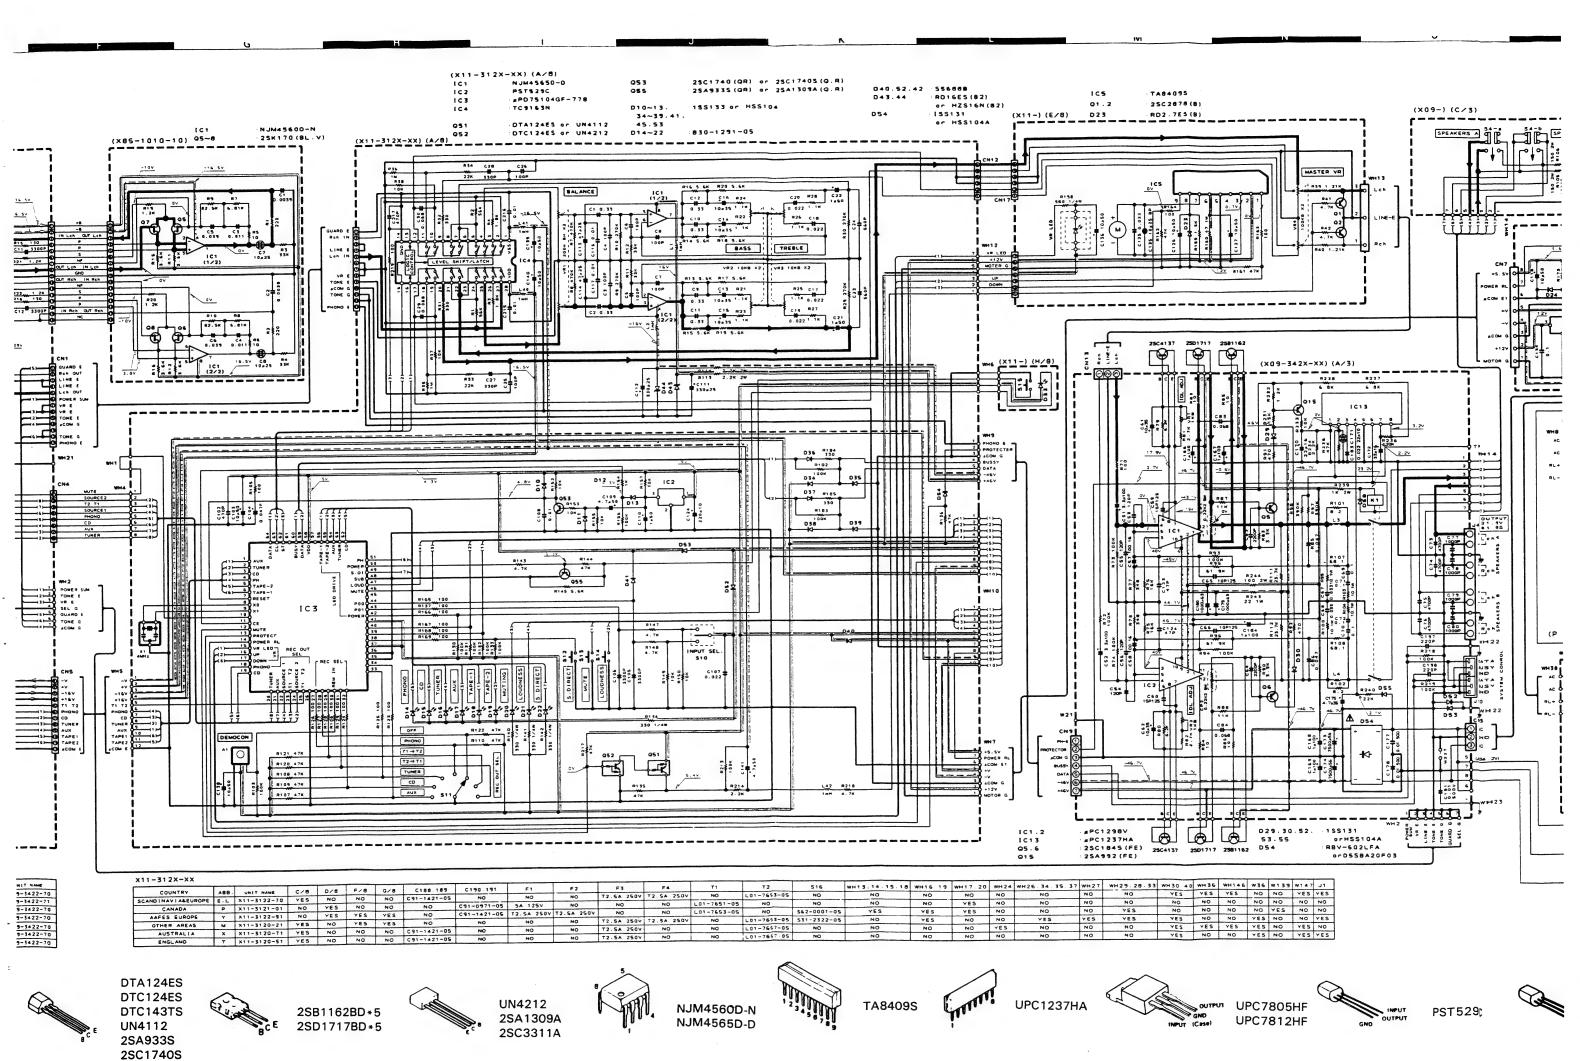

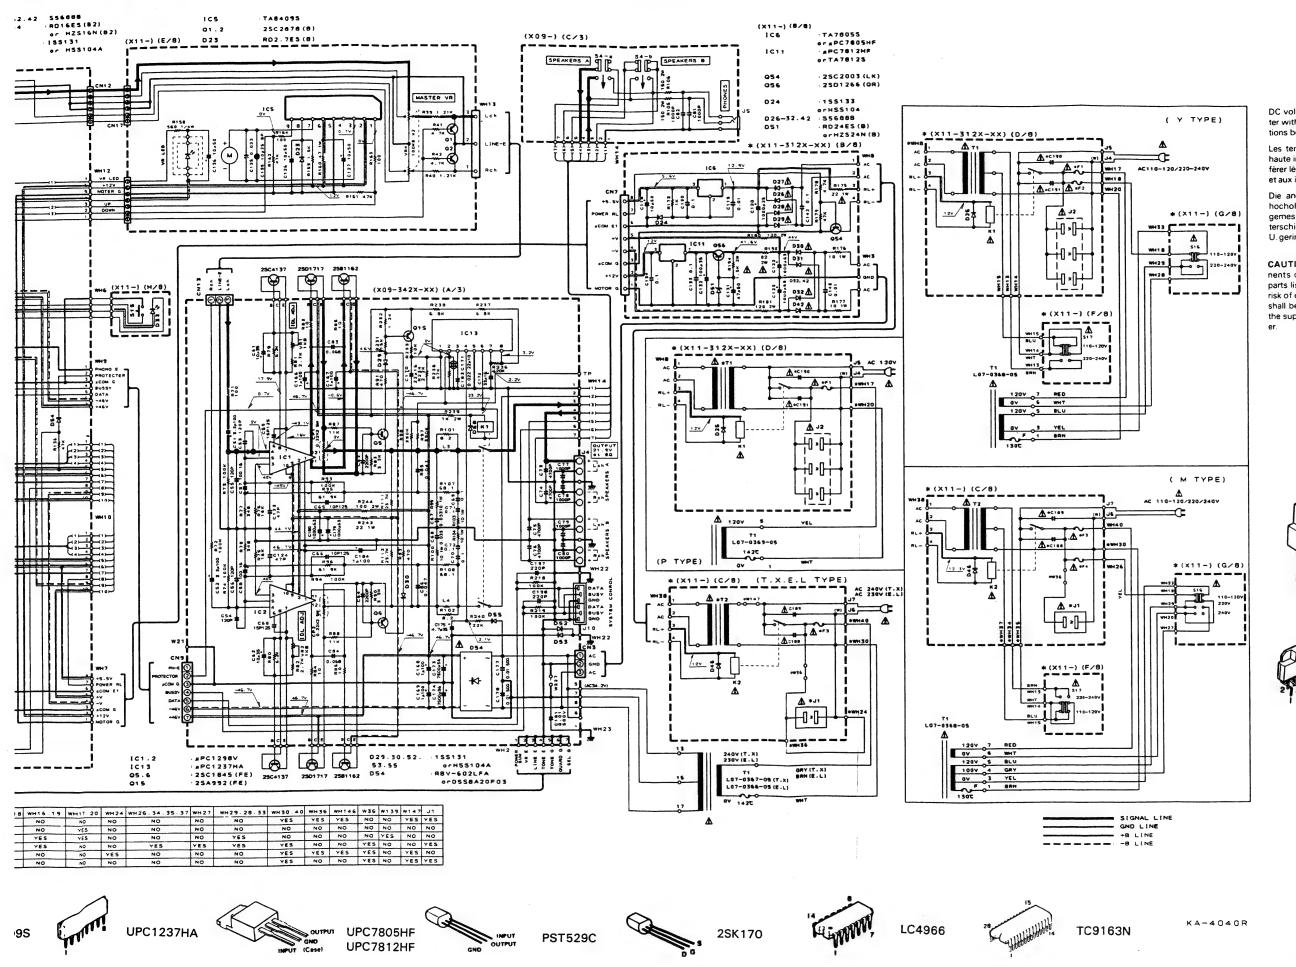

DC voltages are as measured with a high impedance voltmeter with no signal input. Values may vary slightly due to variations between individual instruments or and units.

Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance sans signal d'entrée. Les valeurs peuvent différer légèrement du fait des variations inhèrentes aux appareils et aux instruments de mesure individuels.

Die angegebenen Gleichspannungswerte wurden mit einem hochohmigen Spannungsmesser ohne Eingangssignal gemessen. Dabei schwanken die Meßwerte aufgrund von Unterschieden zwischen einzelnen Instrumenten oder Geräten unt geginntfügig.

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). A Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.



TA7805S TA7812S



UPC1298V



| DESTINATION | LIST |
|--------------------|------|

| | Destination |
|----------|---------------------|
| KA-4040R | E, L, T, X, Y, M, P |

AUDIO UNIT

| X09-3422-70 | E, T, X, Y, M, P |
|-------------|------------------|
| X09-3422-71 | L |

CONTROL UNIT

| X11-3120-21 | M |
|-------------|------|
| X11-3120-51 | Т |
| X11-3120-71 | X |
| X11-3121-01 | Р |
| X11-3122-70 | E, L |
| X11-3122-91 | Υ |

PRE AMPLIFIER UNIT

x New Parts

Parts without Parts No. are not supplied.

| X85-1010-10 | E, L, T, X, Y, M, P |
|-------------|---------------------|
| | |

| | Raf. No. | Address | Perts | Parts #8 & | No. #a ⊕ | Description 都 品 名 / 規 格 | nation | Re- |
|---|------------|--------------|-------|----------------------|--------------|---|---------|-----|
| _ | 参照音号 | 位置 | - | 10 44 | | | | _ |
| | | | | | K | A-4040R | | |
| | 501 | 1A | * | A01-1986 | ~02 | METALLIC CABINET | | |
| | 502 505 | 2A,2B | * | A60-0102 X94-1000 | | PANEL ASSY REMOTE CONTROL ASSY | | |
| | 06 | 18 | * | A09-0115 | | BATTERY COVER | ĺ | |
| 6 | 509 | 2A, 3B | * | B01-0483 | -01 | PANEL ESCUTCHEON | | |
| 6 | 12 | 2A | | B43-0287 | | KENWOOD BADGE | Y | |
| | | 1 | | B46-0094 B46-0095 | | WARRANTY CARD | Y | l |
| | | | | B46-0096 | | WARRANTY CARD | X | |
| | | 1 | | B46-0121 | | WARRANTY CARD | P | |
| - | • | 1 | | 846-0122 | | WARRANTY CARD | EL T | |
| | | | | B46-0143 B58-0513 | | CAUTION CARD (PRESET220-240) | Ý | 1 |
| | • | i | * | B60-0559 | | INSTRUCTION MANUAL (ENGLISH) | | |
| - | | | * | B60-0560 | | INSTRUCTION MANUAL (FRENCH) | ELMP | |
| ١ | • | | * | B60-0561 | | INSTRUCTION MANUAL(GE,DU,IT) INSTRUCTION MANUAL(CHINESE) | EL M | |
| | | 1 | * | 860-0562 860-0656 | | INSTRUCTION MANUAL (SPANISH) | M | |
| 6 | 513 | 38,3C | | D21-1657 | -13 | EXTENSION SHAFT(K29-4293 ASSY) | | |
| | 515 | 18 | | E03-0115 | | AC PLUG ADAPTER | H | |
| 1 | 616 | 1 D | | E30-0459 | | AC POWER CORD AC POWER CORD | EL | |
| | 616 616 | in | 1 | E30-0685 | | AC POWER CORD | Y | |
| 1 | 616 | 1 D | | E30-0974 | -05 | AC POWER CORD | P | 1 |
| ŀ | 616 | 10 | | E30-1341 | | AC POWER CORD | X T | |
| | 616 618 | 1D 3B, 2C | 1 | E30-1416 | 7-05 | AC POWER CORD FLAT CABLE (XO9CN1-X11CN1) 13P | , | 1 |
| l | - | 30,20 | | BQ3-011 | | AC OUTLET | x | |
| ١ | 620 | 2 A | | G11-015 | 5-14 | SOFT TAPE (40X9X2) | | |
| l | | | * | H50-012 | | ITEM CARTON CASE | | |
| ı | - | | * | H10-516 | | POLYSTYRENE FOAMED FIXTURE POLYSTYRENE FOAMED FIXTURE | | |
| l | - | | 1 | H25-022 | | PROTECTION BAG (850X450X0.03) | ELXYMP | |
| ١ | - | | | H25-023 | | PROTECTION BAG (235X350X0.03) | ELXYMP | |
| l | - | | * | H25-065 H25-065 | 1-04 4-04 | PROTECTION BAG (0232 PRINTED) PROTECTION BAG (0225 PRINTED) | T | |
| ١ | 624 | 30,30 | * | J02-107 | | FOOT | | |
| I | 625 | 1B,1C | 1 | J19-051 | | UNIT HOLDER | | |
| ۱ | 626 627 | 1C 2C | | J19-317 | | UNIT HOLDER UNIT HOLDER | | 1 |
| ١ | 628 | 28 | | J19-329 | | HEAD PHONE JACK HOLDER | 1 | |
| 1 | 629 | 1 D | | J42-008 J61-030 | | POWER CORD BUSHING WIRE BAND | | |
| 1 | 630 | 3B | | K29-340 | 5-04 | KNOB (K29-4293-04 ASSY) | | |
| | 631 | 3A | | K29-421 | 0-03 | KNOB POWER | 1 | |
| | 632 | 3A | * | K29-421 | | KNOB ASSY MASTER VOLUME KNOB INPUT SELECTOR | | |
| | 633 634 | 3A 3A | * | K29-421 | | KNOB INPUT SELECTOR KNOB TONE, BAL, RECOUT SEL | | |
| | 635 | 38,30 | | | | KNOB CARTRIDGE | | |

L:Scandinavia Y:PX(Far East, Hawaii) Y:AAFES(Europe)

x New Parts
Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

K:USA T:England

£:Europe

⚠ indicates safety critical components.

Parts without Parts No. are not supplied. Les articles non mentionnes dans le Parts No. ne sont pas fournis.

| Ref. | No. | Address | | Parts No. | Description | | Re- |
|--|----------------------------|------------------------------------|---------|---|--|---------------------|-----|
| # M | 番号 | 位置 | Parts | # 2 # 9 | 部品名/規格 | | 備 |
| 640 640 640 | | 18 18 18 | * * * * | L07-0366-05 L07-0367-05 L07-0368-05 L07-0369-05 | POWER TRANSFORMER POWER TRANSFORMER POWER TRANSFORMER POWER TRANSFORMER | EL TX YM P | |
| 645 A C E F | | 1D 1B, 1C 2A, 3A 1A 2A | | N08-0128-35 N09-0333-05 N09-1445-05 N09-2768-05 N30-3008-46 | BINDING POST (EARTH) TAPPING SCREW (3X12) SET SCREW (M3X0) TAPTITE SCREW (4X8) PAN HEAD MACHIN SCREW | | |
| G J K | | 1C, 1D 3C, 3D | | N89-3008-45 N89-4008-45 N17-1030-46 | BINDING HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW TOOTHED LOCK WASHER | | |
| 91 93 95 | 4 | | | 2SD1717BD*5 2SB1162BD*5 2SC4137F19(V,W) | TRANSISTOR TRANSISTOR TRANSISTOR | | |
| | | 1 | | | 9-3422-70: E, T, X, Y, M, P, 2 | -71: L) | |
| C1 , C3 , C5 - C9 , C11 , | 4 | | | CF92FV1H101K CF92FV1H471J CF92FV1H122J CC45FSL1H390J CF92FV1H332J | MF 100PF K MF 470PF J MF 1200PF J CERAMIC 39PF J MF 3300PF J | | |
| C25 - C51 , C53 , | 14 38 52 54 56 | | * | C90-1951-05 CF92FV1H151K CE04KW2A3R3M CC45FSL1H121J CF92FV1H121K | ALMINIUM ELECTROLYTIC C. MF 150PF K ELECTRO 3.3UF 100WV CGRANIC 120PF J MF 120PF K | | |
| C59 C61 C63 | 58 60 62 64 66 | | | C90-1917-05 CC45FSL1H150J CE04KW1V100M CK45FB1H222K CC45FSL1H100D | ELECTRO 100UF 16WV CERAMIC 15PF J ELECTRO 10UF 35WV CERAMIC 2200PF K CERAMIC 10PF D | | |
| C67 - C69 - C73 - C77 - C83 , | 82 | | | CF92FV1H333J CF92FV1H104J CF92FV1H472J CK45FB1H102K CF92FV1H683J | MF 0.033UF J MF 0.10UF J MF 4700PF J CERAMIC 1000PF K MF 0.068UF J | | |
| C85 ,: C101- C115- C123, C155, | 112 118 124 | | | CF92FV1H473J CE04KW1V470M CE04KW1V470M CC45F5L1H470J CE04KW1J100M | MF 0.047UF J ELECTRO 47UF 35WV ELECTRO 47UF 35WV CERAMIC 47PF J ELECTRO 10UF 63WV | | |
| C161 C166- C170 C171 C172 | 169 | | | CF92FV1H103J CE04KW2A010M CE04KW1C220M C90-1333-05 CE04KW1C330M | MF 0.010UF J ELECTRO 1.0UF 100WV ELECTRO 22UF 16WV NP-ELEC 22UF 10WV ELECTRO 33UF 16WV | | |
| C173, C175 C177, C179, C181 | 178 | | | C90-1824-15 CE04KW1V4R7M CK45FE2H103P CE04KW1J102M CK45FF1H103Z | ALMINIUM ELECTROLYTIC C. ELECTRO 4.7UF 35MV CERAMIC 0.010UF P ELECTRO 1000UF 63MV CERAMIC 0.010UF Z | | |
| C183 C184 C187, | 188 | | | CF92FV1H223J CE04KW2A010M CE04KW1E221M | MF 0.022UF J ELECTRO 1.0UF 100WV ELECTRO 220UF 25WV | | |

| L:Scandinavia | K:USA | P:Canada | | | | |
|------------------------|--------------|---------------|--|--|--|--|
| Y:PX(Far East, Hawaii) | T:England | E:Europe | | | | |
| V:ANFESIEWODA) | X: Australia | M:Other Areas | | | | |


⚠ indicates safety critical components.

| Ref. No. | Address | New Parts | Parts No. | Description | Desti- Re- |
|---|----------------|-----------|--|--|-------------|
| 参照番号 | 位置 | Ø, | # 品 妻 号 | 部品名/規格 | 仕 向備者 |
| 0189,190 0191 0195,196 0197,198 0199-204 | | | CE04KW1V100M CE04KW1C101M CE04KW1H101M CC45F5L2H221J CE04KW1H010M | ELECTRO 10UF 35WV ELECTRO 100UF 16WV ELECTRO 100UF 50WV CERAMIC 220PF J BLECTRO 1.0UF 50WV | |
| 205,206 | | | CEO4KW1E101M | ELECTRO 100UF 25WV | |
| J1 J2 J3 J4 | | * | E13-0249-05 E13-0633-05 E13-0825-05 E20-0839-15 E20-0840-15 | PHONO JACK PHONO PHONO JACK CD, TUNER, AUX PHONO JACK TAPE1, TAPE2 SCREW TERMINAL BOARD SPEAKERS SCREW TERMINAL BOARD SPEAKERS | ETXYMP L |
| J5 J10 | | * | E11-0208-05 E11-0168-05 | PHONE JACK PHONES PHONE JACK SYSTEM CONTROL | |
| - | | | J11-0098-05 J61-0307-05 | WIRE CLAMPER WIRE BAND | |
| .1 ,2 .3 ,4 .5 ,6 | | | L40-1011-47 L39-0085-05 L40-1011-17 | SMALL FIXED INDUCTOR(100UH,K) PHASE-COMPENSATION COIL SMALL FIXED INDUCTOR(100UH,K) | |
|) | 1C,2C 1C,2C | | N89-3008-45 N89-3012-45 | BINDING HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW | |
| CP1 ,2 373 ,74 377 ,78 383 -86 | | | R90-0187-05 RN14BK2C1003FTS RN14BK2C3480FTS R014AB2E100JTS RN14BK2E1003FTS | MULTI-COMP 0.22X2 K 5W RN 100K F 1/6W RN 346.0 F 1/6W FL-PROOF RD 10 J 1/4W RN 100K F 1/4W | |
| 895 .96 899 .100 8101,102 8103,104 8105,106 | | * | RN14BK2E6192FTS RS14GB3A100JKW RD14AB2EBR2JTS RS14GB3A100JKW RS14DB3D151JTE | RN 61.9X F 1/4W FL-PROOF RS 10 J 1W FL-PROOF RD 0.2 J 1/4W FL-PROOF RS 10 J 1W FL-PROOF RS 150 J 2W | |
| 1107,108 1111,112 1220 1221 1239 | | * | RN14BK2E68R1FTS RN14BK2E2372FTS RS14DB3D121JTE RS14DB3D101JTE RS14DB3D102JTE | RN 68.1 F 1/4W RN 23.7K F 1/4W FL-PROOF RS 12D J 2W FL-PROOF RS 180 J 2W FL-PROOF RS 1.0K J 2W | |
| R243 R244 /R1 ,2 | | * | RS14GB3A220JKW RS14GB3A101JKW R12-1083-05 | FL-PROOF RS 22 J 1W FL-PROOF RS 100 J 1W TRIM POT. 1K | |
| (1 (2 -7 51 | | | S51-2092-05 S51-2089-05 S40-6035-05 S42-2139-05 | MAGNETIC RELAY MACNETIC RELAY PUSH SWITCH MULTIPLE PUSH SWITCH | |
| 01 -28 01 -28 029 ,30 029 ,30 031 ,32 | | | HSS104 1SS133 HSS104A 1SS131 HZS24N(B) | DIODE DIODE DIODE DIODE ZENER DIODE | |
| 031 ,32 033 -38 033 -38 | | | R024ES(B) HZS11N(B) RD11ES(B) HZS5.1S(B2) RD5.1JS(B2) | ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE | |

| L:Scandinavia | K:USA | P;Canada |
|------------------------|-------------|---------------|
| Y:PX(Far East, Hawaii) | T:England | E:Europe |
| Y:AAFES(Europe) | X:Australia | M:Other Areas |

⚠ indicates safety critical components

KA-4040R KA-4040R EXPLODED VIEW

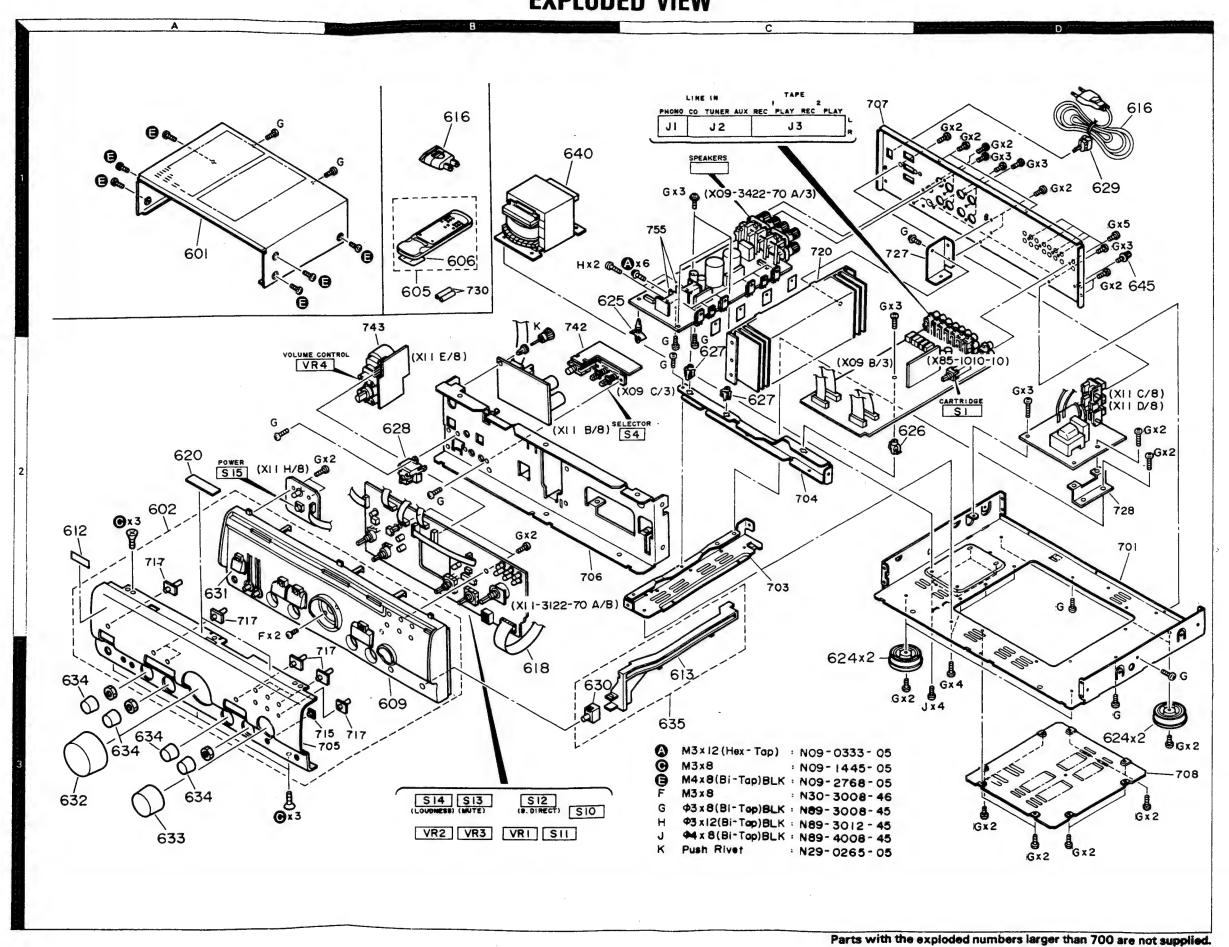

× New Parts

Pants without Parts No. are not supplied

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile on le Parts No. werden nicht gellefant.

No. 4

| Ref. No. | | New | Part | s No. | Descrip | tion | Re- marks |
|---|----|-------------|---|-------------------------------|---|--|--------------|
| 参照書号 | 位置 | Parts ¥f | S 2 | 書号 | 郑 品 名 / | グ境 格 | 備考 |
| D50 D50 D51 D51 D52 ,53 | | | HZS15S(E RD15JS(E HZS2OS(E RD20JS(E HSS104A | 3) | ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE | | |
| D52 ,53 D54 D54 D55 D55 | | | 1SS131 D5SBA201 RBV-6021 HSS104A 1SS131 | | DIODE DIODE DIODE DIODE DIODE | | |
| D60 -68 D60 -68 IC1 ,2 IC13 IC17,18 | | * | HSS104A 1SS131 UPC1298 UPC1237 0N3134 | | DIODE DIODE IC(POWER AMP DRIV IC(POWER AMP) IC(OPTICAL ISOLAT | | |
| IC19-22 IC23 Q1 -4 Q5 .6 Q7 -10 | | | LC4966 NJM4565 2SC2878 2SC1845 DTC143T | (B) (F,E) | IC(CMOS LOGIC BIL IC(OP AMP X2) TRANSISTOR TRANSISTOR DIGITAL TRANSISTO | | |
| Q15 Q16 ,17 Q21 Q22 Q23 ,24 | | | 2SA9920 DTC143T 2SD8820 2SB7720 2SD8820 | S Q,P) Q,P) | TRANSISTOR DIGITAL TRANSISTO TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR | S R | |
| Q25 Q26 | | | DTA124E DTC143T | | DIGITAL TRANSIST | | |
| | | | CONTR | OL UNIT | (X11-3121-XX) | | ., |
| D14 -22 D33 | | | B30-129 B30-129 | | LED LED | | |
| C1 ,2 C3 -8 C9 -12 C13 -16 C17 -20 | | | CF92FV1 CF92FV1 CF92FV1 CE04KW1 CF92FV1 | H101K H334J V100M | MF 0.3 MF 100 MF 0.3 ELECTRO 10U MF 0.0 | PF K BUF J | |
| C21 ,22 C23 ,24 C25 ,26 C27 ,28 C29 ,30 | | | CE04KWI CF92FVI CF92FVI CF92FVI | H561J H101K H331K | ELECTRO 1.0 MF 560 MF 100 MF 330 MF 0.0 | PF J PF K | |
| C102 C103 C104 C105,106 C107 | | | CF92FV CE04KW C90-18: CK45FB CF92FV | 1H100M 27-05 1H332K | CERAMIC 330 | | |
| C108 C109 C110 C111,112 C113,114 | | | CF92FV CE04KW CE04KW CE04KW | 1 H4R7M 1 H010M 1 E331M | MF 0.0 ELECTRO 4.7 ELECTRO 330 ELECTRO 470 | OUF 50WV | |
| C116,117 C118 C119 C120 | | | CF92FV CE04KW CF92FV CE04KW | 1H100M 1H103J | MF 0.0 | 010UF J UF 50WV 010UF J 00UF 25WV | |

L'Scandinavia

K:USA

Y:PX(Fa East, Hawaii) Y:AAFES(Europe)

P:Canada T:England E:Europe

X:Australia M:Other Areas

♠ indicates safety critical components

New Parts

Parts without Parts No. are not supplied.

ties articles non mentionnes dans le Parts No, ne sont pas fournis.

Teile ohne Parts No. werden nicht gellefent.

No. 5

| Ref. No. | Address New | Parts No. | Description | Desti- Re |
|--|----------------|---|--|---------------------|
| 参照番号 | 位 置 新 | | 部 品 名 / 規 格 | 仕 向 億 |
| C122,123 C124 C125 C126,127 C130 | | CE04KW1J102M CE04KW1A221M CF92FV1H223J CE04KW1H100M CF92FV1H104J | ELECTRO 1000UF 63WV ELECTRO 220UF 10WV MF 0.022UF J ELECTRO 10UF 50WV MF 0.10UF J | |
| C131 C132 C133,134 C135 C136 | | CE04KW1H470M CE04KW1V101M CF92FV1H104J C90-1332-05 CE04KW1H100M | ELECTRO 47UF 50WV ELECTRO 100UF 35WV MF 0.10UF J NP-ELEC 10UF 25WV ELECTRO 10UF 50WV | |
| C138-140 C141 C142 C143 C188,189 | | CE04KW1H100M CE04KW1H4R7M CK45FF1H103Z CK45FE2H103P C91-1421-05 | ELECTRO 10UF 50WV ELECTRO 4.7UF 50WV CERAMIC 0.010UF Z CERAMIC 0.010UF P FILM 0.01UF 250AC | ELTXM |
| C190,191 C190,191 C215,216 C217 | | C91-0971-05 C91-1421-05 CF92FV1H103J CK45FB1H471K | FILM 0.01UF 250WV FILM 0.01UF 250AC MF 0.010UF J CERAMIC 470PF K | P Y |
| J1 J1 J2 | | E03-0108-05 E03-0109-05 E03-0111-05 | AC QUTLET AC QUTLET AC QUTLET | ELM T YP |
| F1 F1 ,2 F3 F3 ,4 | | F04-5022-05 F05-2525-05 F05-2525-05 F05-2525-05 | FUSE (UL) (125V 5A UL) FUSE (SEMKO) (250V T2.5A) FUSE (SEMKO) (250V T2.5A) FUSE (SEMKO) (250V T2.5A) | P Y TX ELM |
| CN3 -6 CN3 ,4 CN13-16 CN13,14 | | J13-0075-05 J13-0075-05 J13-0075-05 J13-0075-05 | FUSE CLIP FUSE CLIP FUSE CLIP FUSE CLIP | Y P ELM TX |
| L1 ,2 L40 -42 T1 T1 T1 T2 | | L40-1021-14 L40-1021-14 L01-7651-05 L01-7653-05 L01-7653-05 | SMALL FIXED INDUCTOR(1.0MH,K) SMALL FIXED INDUCTOR(1.0MH,K) POWER TRANSFORMER POWER TRANSFORMER POWER TRANSFORMER | P Y ELM |
| T2 X1 | | L01-7657-05 L78-0267-05 | POWER TRANSFORMER RESONATOR 4MHz | TX |
| G H | 2A,3B 2A,3B | N89-3008-45 N89-3012-45 | BINDING HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW | |
| R39 ,40 R113,114 R160 R174 R175 | | RN14BK2C1211FTS RS14DB3D222JTE RS14DB3A47OJTE RS14DB3D47OJTE RS14DB3A22OJTE | RN 1.21K F 1/6W FL-PROOF RS 2.2K J 2W FL-PROOF RS 47 J 1W FL-PROOF RS 47 J 2W FL-PROOF RS 22 J 1W | |
| R176.177 R180,181 R190 R191 R194 | | RS14DB3A100JTE RS14DB3D121JTE RS14DB3DB20JTE RD14AB2E120JTS RS14DB3A152JTE | FL-PROOF RS 10 J 1W FL-PROOF RS 120 J 2W FL-PROOF RS 82 J 2W FL-PROOF RD 12 J 1/4W FL-PROOF RS 1.5K J 1W | |
| VR1 VR2 ,3 VR4 | 1 | * R06-5191-05 R06-3061-05 R29-5058-05 | POTENTIOMETER BALANCE POTENTIOMETER BASS, TREBLE POTENTIOMETER MASTER VOLUME | |

L:Scandinavia Y:PX(Far East, Hawaii)

P:Canada K:USA T:England E:Europe

Y: AAFES (Europe)

X:Australia M:Other Areas

⚠ indicates safety critical components

× New Parts

Forts without Parts No. are not supplied.

No. 7

⚠ indicates salety critical components.

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

K:USA

T:England

L:Scandinavia

Y:PX(Far East, Hawaii)

Y:AAFES(Europe)

P:Canada

E:Europe

X: Australia M: Other Areas

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. | Address New | Parts No. | Description | Desti- Re- |
|---|-------------|--|---|-------------|
| 参照番号 | 位 匯 新 | * * * * | 部 品 名/規 格 | 仕 向 億4 |
| K1 K2 S11 S12 -15 | | S51-1052-05 S51-1052-05 S60-0009-05 S40-1064-05 | MAGNETIC RELAY MAGNETIC RELAY ROTARY SWITCH RECOUT SELECTOR PUSH SWITCH | YP ELTXM |
| 516 | | S31-2322-05 | SLIDE SWITCH VOLTAGE SELECT | M |
| S16 ,17 S17 | | \$62-0001-05 \$62-0001-05 | SLIDE SWITCH VOLTAGE SELECT SLIDE SWITCH VOLTAGE SELECT | Y M |
| S10 | * | T99-0521-05 | ROTARY ENCODER INPUT SELECTOR | |
| 010 -13 010 -13 023 023 024 | | HSS104 1SS133 HZS2.7N(B) RD2.7ES(B) HSS104 | DIODE DIODE ZENER DIODE ZENER DIODE DIODE | |
| 024 025 025 026 -32 034 -39 | | 1SS133 HSS104A 1SS131 S5688B HSS104 | DIODE DIODE DIODE DIODE | YP YP |
| 034 -39 040 041 041 042 | | 1SS133 556000 HSS104 1SS133 S56000 | DIODE DIODE DIODE DIODE | |
| D43 ,44 D43 ,44 D45 D45 D46 | | HZS16N(B2) RD16ES(B2) HSS104 1SS133 HSS104A | ZENER DIODE ZENER DIODE DIODE DIODE DIODE | ELTXM |
| D46 D51 D51 D52 D53 | | 1SS131 HZS24N(B) RD24ES(B) S5688B HSS104 | DIODE ZENER DIODE ZENER DIODE DIODE DIODE | ELTXM |
| D53 D54 D54 IC1 IC2 | | 155133 HS5104A 155131 NJM4565D-D PST529C | DIODE DIODE DIODE DIODE IC(SYSTEM RESET) | |
| IC3 IC4 IC5 IC6 IC6 | * | UPD75104GF-778 TC9163N TA8409S TA7805S UPC7805HF | IC IC(BILATERAL SWITCH X16) IC(MOTOR CONTROL) IC(VOLTAGE REGULATOR/ +5V) IC(VOLTAGE REGULATOR/ +5V) | |
| IC11 IC11 Q1 ,2 Q51 Q51 | | TA7812S UPC7612HF 2SC2878(B) DTA124ES UN4112 | IC(VOLTAGE REGULATOR/ +12V) IC(VOLTAGE REGULATOR/ +12V) TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR | |
| 952 952 953 953 954 | | DTC124ES UN4212 2SC1740S(Q,R) 2SC3311A(Q,R) 2SC2003(L,K) | DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR | |

L:Scandinavia Y:PX(Far East, Hawaii) Y:AAFES(Europe)

K:USA

T:England

P:Canada E:Europe X:Australia M:Other Areas

A indicates safety critical components.

| Ref. No. | Address No | | | Part | s N | to. | | Des | script | ription | | | Desti- nation | Re- |
|----------------------------------|------------|------|------------------------------|------|------------|------------------|--|-----|---------------------------------|---------|-----|--------------|------------------|-----|
| 参照番号 | 位置 | | # | A | * | 4 | 部 | A | 名/ | 規 | 档 | | | 備 |
| 55 55 56 | | - 1: | 25A1 25A9 25D1 | 335 | (Q, | R) | TRANSISTOR TRANSISTOR TRANSISTOR | | | | | | | |
| 1 | | | W02- | 1046 | 6-0 | 15 | ELECTRIC C | IRC | UIT M | 1001 | JLE | | | |
| | | 1 | PRE | AN | PL | IFIER I | UNIT (X85- | 10 | 10-0 | 10 |) | | | |
| C1 ,2 C3 ,4 C5 ,6 C7 ,8 | | | CF92 CF92 CF92 C90- | FV1 | H11 H39 | 13J 33J | MF MF MF NP-ELEC | | 39008 0.011 0.039 10UF | UF | | wv | | |
| R7 ,8 R9 ,10 | | | | | | 311FTS 252FTS | RN RN | | 6.811 82.51 | | F | 1/6W 1/6W | | |
| IC1 Q5 -8 Q5 -8 | | | NJM4 25K1 25K1 | 70(| BL: |) | IC FET FET | | | | | | | |
| | | | | | | | | | | | | | | |
| | | İ | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |

SPECIFICATIONS

(For U.K. and Europe)

| Continuous rated power output |
|--|
| (DIN) 1 kHz, at 8 Ω |
| at 4 Ω 90 W + 90 W |
| (IEC/NE) From 63 Hz to 12,500 Hz, 0.7% T.H.D. |
| at 8 Ω 70 W + 70 W |
| at 4 Ω 90 W + 90 W |
| Dynamic power |
| 120 W (4 Ω) |
| 140 W (2 Ω) |
| |
| m |
| Total harmonic distortion 0.06% (20 Hz – 20,000 Hz, 60 W, 8 Ω) |
| 0.06% (20 Hz~ 20,000 Hz, 00 W, 0 U) |
| 0.03% (1 kHz, 60 W, 8 Ω) |
| Intermodulation distortion 0.06% (60 W, 8 Ω) |
| (70 Hz : 7 kHz = 4:1) |
| Frequency response |
| CD 5 Hz ~ 100 kHz, +0 dB, -3 dB |
| PHONO 'RIAA' response |
| 20 Hz ~ 20 kHz, +0.3 dB, -0.3 dB |
| Maximum innut level |
| PHONO (MM) 120 mV, 0.06% T.H.D. at 1 kHz |
| PHONO (MC) 10 mV, 0.06% T,H.D. at 1 kHz |
| Signal to noise ratio |
| PHONO (MM) 87 dB (IHF '66)/80 dB (IHF '78) |
| PHONO (MC) 67 dB (IHF '66)/74 dB (IHF '78) |
| CD/TUNER/AUX/TAPE |
| 101 dB (IHF '66)/82 dB (IHF '78) |
| PHONO (MM) 58 dB (DIN, 50 mW output) |
| CD/TUNER/AUX/TAPE |
| 59 dB (DIN, 50 mW output) |
| 55 dB (Dite, 50 mit dalpar) |

| A |
|---------------------------------|
| Input sensitivity/impedance |
| PHONO (MM) |
| PHONO (MC) 0.2 mV/100 Ω |
| CD/TUNER/AUX/TAPE 200 mV/47 kΩ |
| Tone control |
| BASS ± 10 dB (at 100 Hz) |
| TREBLE ± 10 dB (at 10 kHz) |
| Loudness control |
| VOLUME at - 30 dB level |
| +6 dB (100Hz), +3 dB (10 kHz) |
| Output level/impedance |
| TAPE REC 200 mV/1 kΩ |
| |
| General |
| 200 111 |
| Power consumption 200 W |
| AC outlet |
| SWITCHED 200 W max. |
| Dimensions W: 440 mm (17-5/16") |
| H: 137 mm (5-3/8'') |
| D: 345 mm (13-9/16") |
| |
| Weight (net) 8.7 kg (19.2 lb) |

(For other countries)

| Continuous rated power output |
|--|
| (IHF '66) From 20 Hz to 20,000 Hz 0.06% T.H.D. |
| at 8 Ω 60 W + 60 W |
| (IEC/NF) From 63 Hz to 12,500 Hz, 0.7% T.H.D. |
| at 8 Ω 70 W + 70 W |
| at 4 \(\Omega \) 90 W + 90 W |
| Dynamic power 90 W (8 Ω) |
| 120 W (4 Ω) |
| 140 W (2 Ω) |
| *************************************** |
| Damping factor 60 (50 Hz) |
| Total harmonic distortion |
| Total narmonic distortion |
| 0.06% (20 Hz ~ 20,000 Hz, 60 W, 8 Ω) |
| 0.03% (1 kHz, 60 W, 8 Ω) |
| Intermodulation distortion 0.06% (60 W, 8 Ω) |
| (70 Hz : 7 kHz = 4:1) |
| Frequency response |
| CD 5 Hz ~ 100 kHz, +0 dB, -3 dB |
| PHONO 'RIAA' response |
| 20 Hz~20 kHz, +0.3 dB, -0.3 dB |
| Maximum Input level |
| PHONO (MM) 120 mV, 0.06% T.H.D. at 1 kHz |
| PHONO (MC) 10 mV, 0.06% T.H.D. at 1 kHz |
| Signal to noise ratio |
| PHONO (MM) 87 dB (IHF '66)/80 dB (IHF '78) |
| PHONO (MC) 67 dB (IHF '66)/74 dB (IHF '78) |
| CD/TUNER/AUX/TAPE |
| 101 dB (IHF '66)/82 dB (IHF '78) |
| 101 dB (IMF 00)/02 dB (IMF 70) |

| Input sensitivity/impedance |
|---------------------------------|
| PHONO (MM) 2.5 mV/47 kΩ |
| PHONO (MC) 0.2 mV/100 Ω |
| CD/TUNER/AUX/TAPE 200 mV/47 kΩ |
| Tone control |
| BASS ± 10 dB (at 100 Hz) |
| TREBLE ± 10 dB (at 10 kHz) |
| Loudness control |
| VOLUME at -30 dB level |
| +6 dB (100Hz), +3 dB (10 kHz) |
| Output level/impedance |
| TAPE REC 200 mV/1 kΩ |
| General |
| Power consumption 200 W |
| AC outlet |
| SWITCHED Total 200 W max. |
| Dimensions W: 440 mm (17-5/16") |
| H: 137 mm (5-3/8") |
| D: 345 mm (13-9/16") |
| |
| Weight (net) 8.7 kg (19.2 lb) |

SPECIFICATIONS

(For Canada)

Continuous rated power output (FTC)

60 watts per channel minimum RMS, both channels driven, at 8 Ω from 20 Hz to 20,000 Hz with no more than 0.06% total harmonic distortion.

| Dynamic power | 120 W (4 Ω) |
|-----------------------------|--|
| Damping factor | 60 (50 Hz) 0.06% (20 Hz ~ 20,000 Hz, 60 W, 8 Ω) |
| Total harmonic distortion | 0.03% (1 kHz, 60 W, 8 Ω) |
| Intermodulation distortion | |
| Frequency response | |
| CD | 5 Hz~80 kHz, +0 dB, -3 dB |
| PHONO 'RIAA' response | 20 Hz \sim 20 kHz, +0.3 dB, -0.3 dB |
| Maximum input level | |
| PHONO (MM) | 120 mV, 0.06% T.H.D. at 1 kHz |
| PHONO (MC) | 10 mV, 0.06% T.H.D. at 1 kHz |
| Signal to noise ratio | |
| PHONO (MM) | 87 dB (IHF '66)/80 dB (IHF '78) |
| PHONO (MC) | 67 dB (IHF '66)/74 dB (IHF '78) |
| CD/TUNER/AUX/TAPE | 101 dB (IHF '66)/82 dB (IHF '78) |
| Input sensitivity/impedance | |
| PHONO (MM) | 2.5 mV/47 kΩ |
| PHONO (MC) | 0.2 mV/100 Ω |
| CD/TUNER/AUX/TAPE | 200 mV/47 kΩ |
| Tone control | |
| BASS | ± 10 dB (at 100 Hz) |
| TREBLE | ± 10 dB (at 10 kHz) |
| Loudness control | |
| VOLUME at - 30 dB level | +6 dB (100Hz), +3 dB (10 KHz) |
| Output level/impedance | |
| TAPE REC | 200 mV/1 kt/2 |
| General | |
| Power consumption | 2.5 A |
| AC outlets | |
| SWITCHED | . FOR Canada: |
| | 3; (Total 200 W, 1.6 A max.) |
| Dimensions | W: 440 mm (17-5/16) H: 137 mm (5-3/8'') |
| | D: 345 mm (13-9/16") |
| **** | |
| Weight (net) | . O. / Ry (13.2 ID) |
| | |

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice

Note:

Component and circuitry are subject to modification to insure best operation under differing local conditions. This manual is based on, the Europe (E) standard, and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.

KENWOOD CORPORATION

Shionogi Shibuya Building, 17-5, 2-chome Shibuya, Shibuya-ku Tokyo 150. Japan

KENWOOD U.S.A. CORPORATION 2201 East Dominguez Street, Long Beach, CA 90810; 550 Clark Drive, Mount Olive, NJ 07828, U.S.A. KENWOOD ELECTRONICS CANADA INC. PO BOX 1075, 959 Gana Court, Mississauga, Ontario, Canada L4T 4C2 TRIO-KENWOOD UK LIMITED KENWOOD House, Dwight Road, Watford, Herts., WD1 8EB United Kingdom KENWOOD ELECTRONICS BENELUX NV veg 418 B-1930 Zaventem, Belgiun KENWOOD ELECTRONICS DEUTSCHLAND GMBH Rembrucker-Str. 15, 6056 Heusenstamm, West Germany TRIO-KENWOOD FRANCE S.A. 13 Boulevard Ney, 75018 Paris, France KENWOOD LINEAR S.p.A. 20125, MILANO-VIA ARBE, 50, ITALY EDIS, MILANO-VIA ANDE, SU, INALY KENWOOD ELECTRONICS AUSTRALIA PTY, LTD. (INCORPORATED INLY SW) 4E Woodcock Place, Lane Cove, NSW 2066, Australia KENWOOD & LEE ELECTRONICS, LTD.

Wang Kee Building, 4th Floor, 34-37, Connaught Road, Central, Hong Kong

Druck: Schaltungsdienst Lange Berlin (Germany)